
BERKELEY (U-DS14WH/B) ASSEMBLY INSTRUCTIONS W/ 30" X 42" TOP

PARTS LIST A. Stand Frame	QTY 1				•
B. Metal Guide	2		B. Metal Guides		
C. Plastic Knob	4		CA.		. I
D. Hex Bolt	4				
E. Phillips Screw	14		C. Plastic Knob	_	
F. 30 x 42 Table Top	1			F. 30 x 42 Tabl	le Тор
*G. Metal Pencil Edge Sheet Stopper	1	Ų A. Stand Frame	D. Hex Bolt E. Phillips Screw		


*Optional accessory not included with all packages

*G. Pencil Edge/Sheet Stopper



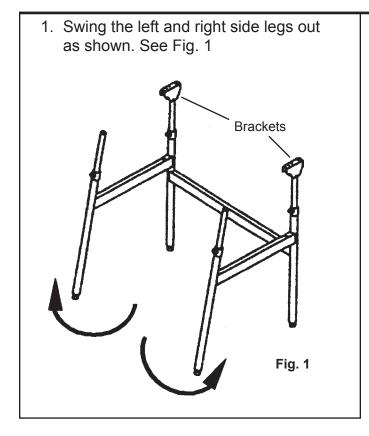

Assembly Question? Missing or Damaged Part(s) in transit? **PLEASE DO NOT RETURN THIS TABLE TO THE STORE**Call our Customer Service Hotline at (313) 895-0700 or email us at custservmud@gmail.com for immediate assistance!

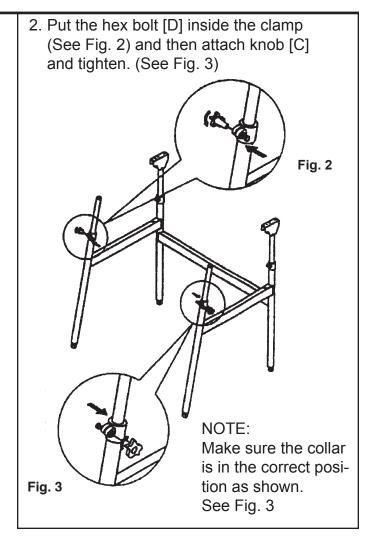


ONE YEAR MANUFACTURER'S WARRANTY

This table is guaranteed for one year to be free from MANUFACTURER defect during that period of use from the original purchase date. Items or parts subjected to extreme temperatures, stress, or abuse or use of this product other than the manufacturer's intended purpose are not covered under the warranty

REGISTER THE WARRANTY FOR YOUR NEW TABLE:

Your warranty must be filled out and postmarked or completed digitally within (10) days of the purchase date on your receipt. Return inserted warranty postcard via US Mail or register online at http://www.martinuniversaldesign.com/warranty-registration/

BERKELEY (U-DS14WH/B) ASSEMBLY INSTRUCTIONS W/ 30" X 42" TOP

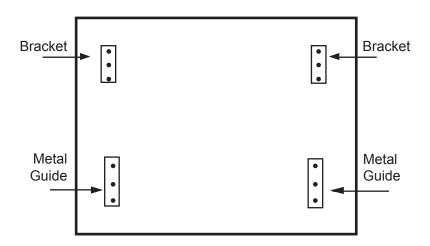

Step 3

Place (F) 30" x 42" Table Top upside down (so holes are facing upwards) on a carpeted surface to avoid scratching

Step 4

Attach (B) Metal Guides into predrilled holes using (E) Phillips Screws as shown in image above.

NOTE: If using an electric device, be careful to not overtighten and stress fracture the top

Step 5

Take rear inner legs (with brackets) out of the (A) Stand Frame and line up over the predrilled holes as shown in the image above. Attach using (E) Phillips Screws as shown in image above.

NOTE: If using an electric device, be careful to not overtighten and stress fracture the top

Step 6

Lift Table Top and attached rear inner legs (with brackets) and insert them into the (A) Stand Frame. Swing the front legs into the metal guides to secure table.

*THE FOLLOWING STEP (7) IS FOR TABLES INCLUDING PART (G) Metal Pencil Edge/Sheet Stopper, AN OPTIONAL ACCESSORY NOT INCLUDED IN ALL U-DS14 WH/B BERKELEY TABLE PACKAGES

*Step 7

Attach (G) Metal Pencil Edge/Sheet Stopper to the front edge of the (F) 30" x 42" Table Top into the predrilled holes using the remaining (E) Phillips Screws.

NOTE: If using an electric device, be careful to not overtighten and stress fracture the top

