


## 92-2001 • WATERCOLOR FIELD EASEL **ASSEMBLY/SET-UP INSTRUCTIONS**

STEP 1. Begin by removing easel from carton. See Fig 1 below.

STEP 4.

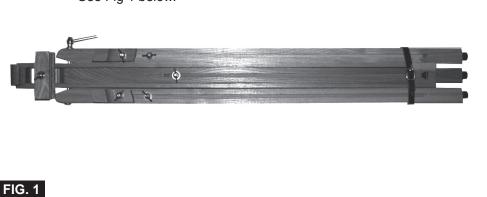

STEP 2. Unbuckle & Loosen leather strap, to release legs of easel. See Fig 2 below. FIG. 2 STEP 3. After unbuckling strap, spread-out legs of easel and stand on their feet. See Fig 3 below.

height adjustment of legs. Tighten at desired height. See Fig 4 below.

Loosen wing-nut on each leg to allow for

STEP 5. Once all legs are extended and secure, lower portion of easel should look similar to FIG. 5

FIG. 4






WEBER Martin/F. Weber Co. 4444 Lawton Avenue, Detroit, MI 48208 USA Tel:(313)895-0700 • Fax:(313)895-0709 E-mail:Custservmud@aol.com www.MartinUniversalDesign.com • www.weberart.com

FIG. 3

## 92-2001 • WATERCOLOR FIELD EASEL **ASSEMBLY/SET-UP INSTRUCTIONS CONTINUED**

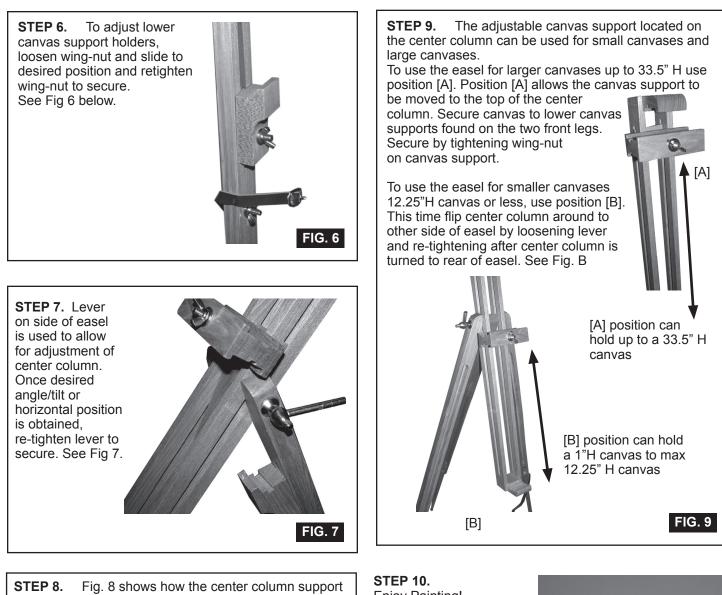

can be turned to allow for desired tilt of column, by loosening the lever on the easel.





WEBER Martin/F. Weber Co. 4444 Lawton Avenue, Detroit, MI 48208 USA Tel:(313)895-0700 • Fax:(313)895-0709 E-mail:Custservmud@aol.com www.MartinUniversalDesign.com • www.weberart.com **Enjoy Painting!** 

